
▼ Verbatim.

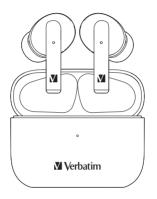

User Manual / 사용자 매뉴얼 / 產品手冊 / 产品手册 Model: VAPBT064

Introduction:

Thank you for choosing this Verbatim product. Please read this manual carefully prior to use so as to fully understand the product and its correct usage.

Caution:

 
- Do not alter, modify or disassemble the device. There are no user-serviceable parts inside, and incorrect reassembly may result in shock or fire bazard.
- Do not drop or subject the device to strong mechanical shock. Do not expose to moisture, water, rain, snow, spray, heat or sources of ignition.
- Use a damp soft cloth to clean the surface of the device. Do not use chemical solvents.
- Contact our customer support team if you have troubleshooting issues with this product.
- Do not operate the device if it has been dropped or otherwise damaged in any way.
- Keep out of reach of children.
- To reduce the risk of electric shock, unplug the device from any power source before attempting maintenance and cleaning.

Package contents:

- 2 x Earbuds (1x Left, 1x Right)
- 1 x Charging case
- 1 x USB-A to Type C cable
- 3 x Ear tips (S,M,L)

Specifications:

- Product name: Bluetooth 5.0 In-Far TWS Farbuds
- Rluetooth 5.0
- Speaker dimensions: 13.2mm
- Battery: Charging case 250mAh, Earbud each side 30mAh
- Speaker frequency range: 20Hz 20KHz
- Max power output: 18mW
- Speaker impedance: 32Ω±15%
- Speaker sensitivity: 105±3dB
- Audio play time: Approx 3 4hrs
- Talk time: Approx 3 4hrs
- Storage temperature: -10°c 55°c
- Operating temperature: 0°c 40°c
- Supporting Bluetooth profile:
- A2DP, AVCTP, AVDTP, AVRCP, HFP, SPP, SMP, ATT, GAP, GATT, RFCOMM, SDP, I2CAP - Materials: ARS
- Dimensions: 58.2 x 23.9 x 45(mm) (Charging case) 23.7 x 16.2 x 30.8(mm) (Earbuds)
- Weight: Earbuds: 8g (2 pcs) / Charging case: 38g
- Bluetooth pairing name: Verbatim INE 1
- Limited Warranty: One Year



Pairing your Bluetooth for the first time:



 Put the earbuds into charging case and it starts charging battery.



Take the earbuds out of the charging case and the left and right earbuds will pair up themselves.



Please turn on the Bluetooth function of your smartphone and choose "Verbatim INE 1" to connect.



Start to use.

Bluetooth earphones may receive interference from other electronic devices. Sometimes, the

connection is unetable

If the earbuds do not connect to each other or your smartphone, please follow the steps below to reset the earbuds:

1. Put the left and right earbuds into the charging

2. Make sure the earbuds are in charging mode.

 Take the earbuds out of the charging case and choose the pairing ID on your smartphone to connect them again.

Handy tips:

- 1. Choose the tips size that comfortably fit your ear and adjust the position of the earbuds to provide the best sound quality.
- 2 Adjust the volume to a suitable level for enjoying the best music. It may burt your ears if the volume is too loud.

After the first connection, the earbuds will automatically connect to smartphone when it is on.

Turning on earbuds:



Type 1:

When the earbuds are not in the charging case. press the sensor for 1.5 sec to turn on the specific earbud.



Type 2:

When the earbuds are inside the charging case, pick up the earbuds and they will power on automatically.

> A Please use manual connection on your smartphone, if it does not connect automatically.





Press the sensor on either one of the earbuds for 4 sec. both earbuds will be turned off.



Type 2:

Put the earbuds into the charging case for auto power off.


A If the power is still on. please remove the earbuds from the case and then put them hack in








 Type 3: The earbuds power off automatic:



Touch sensor:

 





Activate
Google Assistan/Siri

Previous

earbud twice

x 1

Press 2 sec

Press left

 
Wear earbuds correctly.

Dual channel voice for phone call:

When calling, you can hear voice from both earbuds and touch either earbud for control.



1. Touch either earbud for answering call.



2. Take the call.

3. Hang up by touching either earbud.

At any error occurs, please check if you are wearing the earbuds correctly.

Earbuds charging:



 When the battery is low, you will hear an alert on the earbuds. The alert will be repeated every minute.



Put the earbuds into the charging case and they will start charging. No LED indication for charging.



It takes about 1 hr to fully charge up the earbuds.

Case charging:



 When battery is low, the LED will glow red for 10 sec when you open the charging box.



 Connect the Type C connector of the supplied cable to the Type C port of the charging case.
 Connect the USB-A connector of the supplied cable to either a computer port or USB-A AC adaptor.



 LED will glow red for 10 sec and then turn off. If you unplug the charging cable after this, the LED will be turn green for 4 sec.

A Please check and charge battery frequently, to get a better performance of battery.

After the first connection, both earbuds can be used individually.



 User can turn on either one of the earbuds and it will connect to the smartphone automatically.



When using both earbuds, put either one of the earbuds into the charging case, the other earbud that is connected to the smartphone will remain working.

Earbud LED Summary:

Status	LED indication			
Start charging to charging case	Red LED for about 10 seconds, then off.			
Unplug the charging cable from charging box when LED is red	Red LED remain until it is off.			
Unplug the charging cable from charging box when LED is off	Green LED on for about 4 seconds.			
Open charging box (when battery is 3.1V or above)	Green LED on for about 10 seconds, then off.			
Open charging box when it is low battery (when battery drop to 3.1V)	Red LED on for about 10 seconds, then off.			
Taking out earbuds/Putting in earbuds	Green LED flash once			

EAO.

- O. Why do the earbuds turn off when they are still in use?
- A. The earbuds may be turned off by pressing the touch sensor accidentally. Put the earbuds back into the charging case and take them out again.
- Q. Why isn't the charging case charging?
- A. Check the connection between the charger and charging case to make sure the cable is well connected to both. If it is still not working, use another charging cable.
- Q. Why is there no sound from the earbuds?
- A. Turn off the earbuds and turn them on again. The left and right earbuds will pair up again after restart.
- Q. Why is the signal unstable?
- A. Put the smartphone in front pocket for better connection.













Verbatim Australia Ptv Ltd (ABN 39 005 706 374)

· Warranty Statement

Our goods come with guarantees that cannot be exclude under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable unlifty and the failure does not amount to a major failure.

Verbatim Australia Pty Ltd (ABN 39 005 706 374) ("Verbatim") provides the following warranty in relation to its goods ("Product").

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State & Federal legislation that cannot be excluded. Nothing in this warranty is to be interpreted as excluding, restricting or modifying any State or Federal legislation applicable to the supply of goods and services which cannot be excluded, restricted or modified.

Verbatim warrants that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship for the period specified on the product packaging and/or the website from date of purchase. If a defect appears in the Product before the end of the warranty period and Verbatim finds the Product to be defective in materials and workmanship, Verbatim will at its own discretion repair or replace the Product free of charge. If goods presented for repair are capable of retaining user-generated data, repair of these goods may result in loss of the data.

Proof of Purchase

Proof of purchase shall be required to be eligible for this warranty and to establish the commencement date of this warranty. This warranty is valid for the original purchase only and is not transferrable to a subsequent customer if the Product is sold by the original customer during the warranty period.

The term of your warranty period shall commence from the purchase date appearing on your purchase receipt from an authorised distributor, reseller or retailer and extends only for the time set forth in the Product documentation. This information can be obtained from the packaging and/or the Verbatim Australia website.

Returned Merchandise Authorisation

No product may be returned to Verbatim Australia without first contacting us for a RMA (Returned Merchandise Authorisation) number. If it is determined that a

Product may be defective, you will be given an authorisation number and instructions for Product return. An unauthorised return, i.e. one for which an RMA number has not been issued, will be returned to you at your expense. Authorised returns are to be shipped prepaid and insured to our Head Office in qualified packagino.

. Notice to Customer Relating to Repair of Goods

Verbatim Australia will not accept goods for repair unless we have provided the consumer with a Notice to Customer Relating to Repair of Goods that complies with regulations. As the notice relates to the repair of Goods that store user-generated data, the repairer's Notice states that the repair of Goods may result in loss of data. Since it is also our practice to supply refurbished Goods as an alternative to repairing a consumer's defective Goods, our notice specifies that the Goods presented for repair may be replaced by refurbished Goods of the same type rather than being repaired. The Repairer's Notice will be issued at the same time that we issue an RMA number. This statement is also available on the Verbatim Australia website.

- Warranty Claims
- 1) If a fault covered by warranty occurs, the customer must first:
 - a) Contact Verbatim Australia Head Office using the contact details provided below: or
 - b) Return the Product to the retailer from which the Product was purchased.
- Any warranty claim must be accompanied by:
 A) Proof of purchase; and b)Full details of the alleged defect.
- Troot of purchase, and by underland of the aneged defect.
 Werbatim or the retailer from which the Product was purchased finds no
- defect in the Product after inspection and testing, the customer must pay Verbatim's usual costs of service work and testing.

 4) The customer must bear the cost of the transport to Verbatim or to and from
- 4) The customer must bear the cost of the transport to Verbatim or to and from the retailer to make the warranty claim including all insurance of the Product. Verbatim will bear the cost of the return transport to the customer once the claim has been finalised.
- Exclusions
- The warranty will not apply where:
- The Product has been repaired, altered or modified by someone other than Verbatim or an authorised repair agent:

- 2) The alleged defect in the Product is within acceptable industry variances:
- Verbatim cannot establish any fault in the Product after testing and inspection;
- The Product has been used other than for the purpose for which it was designed;
- The defect in the Product has arisen due to the customer's failure to properly use and maintain the Product in accordance with Verbatim's instructions, recommendations and specifications (including applicable maintenance schedules);
- The Product has been subject to abnormal conditions or use, including environment, temperature, water, fire, humidity, pressure, stress or similar;
 The defect has arisen due to abuse, misuse, neglect or accident.
- . The warranty does not extend to:
- 1) Damage or defects caused by normal wear and tear;
- 2) General, consequential, punitive, incidental or special damages. These include loss of recorded data, interruption of use, the cost of recovery of lost data, lost profits and the cost of the installation or removal of any Products, the installation of replacement Products, and any inspection, testing or redesign caused by any defect or by the repair or replacement of Products arising from a defect in any Product.
- Incompatibility or poor performance due to specific computer or hardware used.
- Limitations

Verbatim makes no express warranties or representations other than set out in this warranty.

The replacement of the Product or part of the Product is the absolute limit of Verbatim's liability under this express warranty.

Contact Details

Verbatim Australia Pty Ltd

Unit 6, 450 Princes Highway, Noble Park, Victoria 3174, Australia

Tel: +61 3 9790 8999 Fax:+61 3 9790 8955

Email: support@verbatim.com.au

Website: www.verbatim.com.au

소개:

버바팀 제품을 선택하여 주셔서 감사합니다. 제품에 대한 이해와 올바른 사용을 위해 사용 전, 이 매뉴얼을 숙지하여 주시기 바랍니다.

주의:

 
- 제품을 수리, 수정, 변경하지 마십시오. 내부에는 사용자가 수리할 수 있는 부품이 없습니다. 잘못된 재조립으로 충격이나 화재의 위험이 발생한 수 있습니다
- 글 공공로 두 처리되어. - 장치를 떨어뜨리거나 강한 충격을 가하지 마십시오. 장치가 습기, 물, 비 누 스프레이 열 발화워 직사광서에 노축되지 않도록 하신시오
- 제품의 표면은 부드러운 천으로 닦으십시오. 화학용제를 사용하지
- 마십시오. - 이 제품에 대한 문의나 문제 해결에 대해서는 고객 지원팀에 연락하시기
- 바랍니다.
 제품을 떨어뜨리거나 손상이 가해졌을 경우에는 작동하지 마십시오.
- 어린이의 손이 닿지 않는 곳에 보관하십시오.
 가저 들이 의하을 줄이기 의해 오지 처소 저에는 제품에 연결되 저워를
- 감전 등의 위험을 줄이기 위해 유지 청소 전에는 제품에 연결된 전원을 분리하여 주십시오.

구성품:

- 2 x 이어폰(좌, 우 각 1pc)
- 1 x 충전 케이스
- 1 x USB-A to Type C 케이블
- 3 x 이어팁 (S, M, L)

제품사양:

- 제품명: 블루투스 5,0 In-Ear TWS 이어폰
- 블루투스 5.0
- 스피커 크기: 13.2mm
- 배터리: 충전 케이스 250mAh, 이어폰 좌,우 각 30mAh
- 스피커 주파수 범위: 20Hz-20KHz
- 최대 전원 출력: 18mW
- 스피커 임피던스: 32Ω±15% - 스피커 감도: 105±3dB
- 오디오 재생 시간: 약 3 4시간
- 도디오 세경 시간· 약 3 4시간 - 통화 시간: 약 3 - 4시간
- 보관온도: -10℃ 55℃
- 작동 온도: 0°C 40°C
- 지원 블루투스 규격:
- A2DP, AVCTP, AVDTP, AVRCP, HFP, SPP, SMP, ATT, GAP, GATT, RFCOMM, SDP, I2CAP - 채정: ARS
- 제품크기: 58.2 x 23.9 x 45(mm)(충전 케이스) 23.7 x 16.2 x 30.8(mm)(이어폰)
- 무게: 이어폰 8a(2pcs) / 충전 케이스: 38a
- 블루투스 페어링명: Verbatim INE 1
- 제한된 품질보증: 1년



블루투스 페어링을 처음 하실 때



 이어폰을 충전 케이스에 넣으면 배터리 충전이 시작됩니다.



2. 이어폰을 충전 케이스에서 꺼내면 좌,우 이어폰이 페어링됩니다.



 스마트폰의 블루투스를 활성화하고, "Verbatim INE 1"을 선택하여 이어폰을 연결하십시오.



4. 이제 사용하실 수 있습니다.

▲ 블루투스 이어폰은 다른 전자기기의 방해를 받을 수 있습니다. 이 때, 연결이 불안정합니다. 이어폰이 서로 연결되지 않거나 스마트폰에 면결되고 않는 경우, 다음 단계에 따라 이어폰을 재실정하십시오. 1. 차, 우 이어폰을 중권 케이스에 넣으십시오. 2. 이어폰이 중권 모드인지 확인하십시오. 3. 중권 케이스에서 이어폰을 깨내 스마트폰의 페어임 미를 서면되어 되지, 여결하시시오.

유용한 팁:

- 1. 최상의 음질을 위해 사용자의 귀에 맞는 이어팁을 선택하고, 이어폰 착용 위치를 조절하십시오.
- 2. 볼륨은 적정 수준으로 조절하십시오. 너무 큰 볼륨은 귀에 무리를 줄 수 있습니다.

첫 연결 후, 두번째부터는 이어폰이 켜지면 스마트폰에 자동으로 연결될 것입니다.





Type 1:

이어폰이 충전 케이스에 있지 않으면, 이어폰의 센서를 1.5초간 누르십시오.



Type 2:

이어폰이 충전 케이스에 들어 있을 때는 이어폰을 꺼내면 자동으로 전원이 켜집니다.

> ▲ 자동으로 연결이 안될 때는 스마트폰에서 수동으로 연결 하십시오.

이어폰 끄기:



Type 1:

한쪽 이어폰의 센서를 4초간 누르면, 양쪽 이어폰이 모두 꺼깁니다.



Type 2:

(R)

이어폰을 충전 케이스에 넣으면 자동으로 전원이 꺼깁니다.

> ▲ 전원이 꺼지지 않으면 이어폰을 충전 케이스에서 다시 한번 꺼냈다가 넣으십시오.






 Type 3: 이어폰과 연결된 장치의 블루투스가 3분간 끊어지면 이어폰의 전원은 자동으로 꺼집니다.













구글 어시스턴트/ 2초가 누름 Siri 활성화

▲ 이어포은 올바르게 창용하십시오

이중 채널 음성 통화

통화 시, 양쪽 이어폰에서 목소리를 들을 수 있고, 한쪽 이어폰으로 조절할 수 있습니다



 한쪽 이어폰을 터치하여 통화를 할 수 있습니다.



2. 전화를 받으십시오.



 통화 종료 시에는 한쪽 이어폰을 터치하십시오.

> ▲ 문제 발생 시, 이어폰을 올바르게 착용하셨는지 확인하십시오.

이어폰 충전:

M



 배터리가 부족하면, 이어폰에서 반복되는 알림음이 들릴 것입니다.



 이어폰을 충전 케이스에 넣고 충전을 시작하십시오. 충전 시, LED는 켜지지 않습니다.



3. 완충까지는 약 1시간이 걸립니다.

케이스 충전:



 배터리 부족 시, 충전 케이스를 열면 빨간 LED가 10초간 켜집니다.



 제공된 케이블의 Type C 커넥터를 충전 케이스의 Type C 포트에 면결 하십시오. 케이블의 USB-A 커넥터를 컴퓨터 또는 AC 어댑터의 USB-A 포트에 연결 하십시오.



 빨간 LED가 10초간 켜졌다가 꺼질 것입니다. 이 후, 충전 케이블을 뽑으면 녹색 LED가 4초간 켜질 것입니다.

> ▲ 더 나은 배터리 성능을 위해 배터리 충전 상태를 자주 확인하십시오.

첫 연결 후, 양쪽 이어폰은 개별적으로 사용할 수 있습니다.



 사용자는 이어폰 중 하나를 켤 수 있으며, 자동으로 스마트폰에 연결됩니다.



 양쪽 이어폰 사용 중, 한쪽 이어폰을 충전 케이스에 넣으면, 스마트폰에 연결된 다른 이어폰은 계속 작동합니다.

이어폰 상태 및 LED 표시:

<u> </u>				
상태	LED 표시			
충전 케이스로 충전 시작	빨간 LED가 약 10초간 켜진 후, 꺼깁니다.			
빨간 LED가 켜졌을 때, 충전 케이스에서 충전 케이블 분리	빨간 LED는 꺼질 때까지 유지됩니다.			
LED가 꺼졌을 때 충전 케이블과 충전 케이스를 분리	녹색 LED가 약 4초간 켜질 것입니다.			
충전 케이스 오픈(배터리가 3.1V 이상일 때)	녹색 LED가 약 10초간 켜진 후, 꺼집니다.			
배터리가 얼마 없을 때 충전 케이스 오픈(배터리가 3.1V로 떨어졌을 때)	빨간 LED가 약 10초간 켜졌다가 꺼집니다.			
이어폰 꺼내기/넣기	녹색 LED가 한번 깜빡입니다.			

FAQ:

O.사용 중 이어폰이 꺼집니다.

A. 터치 센서가 눌러졌을 수 있습니다. 이어폰을 충전 케이스에 넣었다가 다시 꺼내 보신시오

O. 충전 케이스가 충전 되지 않습니다.

A. 충전 케이스와 충전 케이블의 연결 상태를 확인 하십시오. 문제가 었다면 다른 케이블을 사용하여 보십시오.

Q.이어폰에서 음성이 들리지 않습니다.

A.이어폰을 껐다 다시 켜보십시오. 재시작 후, 양쪽 이어폰은 다시 페어링 될 것입니다.

Q.신호가 불안정 합니다.

A.더 나은 연결을 위해 핸드폰을 앞쪽 주머니에 넣으십시오.









1년의 제한된 품질보증 -

보다 자세한 정보는 www.verbatim.com/warranty를 참고 하십시오



前言:

感謝您選購並使用VERBATIM產品,為讓您能夠更好的使用本產品的 所有功能,請您在正式使用本產品前,仔細閱讀本手冊內所提及的注 意事項以及詳細功能操作說明。

注章事項:

 
- 請不要變更,修改或拆開此設備。內部沒有用戶可維修的零件。不 正確的拆裝可能會導致觸電或火災。
- 請不要摔落或讓設備承受強烈的衝擊。請不要將設備暴露在潮濕, 水,雨,雲,噴霧,熱或火源的環境。
- 可用擰乾的濕棉布輕輕擦抹此設備的外殼,嚴禁使用其他化學溶液 清洗。
- 如在使用本產品上遇到任何問題,請聯繫我們的客戶支援團隊。
- 請勿操作已受損的設備,包括受到摔落或其他形式的損壞。放置於讓兒童接觸不到的地方。
- 為了減少觸電危險,在嘗試任何維修或清潔前,必須拔除連接設備 上的任何電源。

包裝內容:

- 2 x 耳機 (1x左 · 1x 右)
- 1 x 充電盒
- 1 x USB-A 至 Type C充電線
- 3x耳塞(細,中,大)

產品規格:

- 產品名稱:入耳式藍牙5.0真無線耳機
- 藍牙50
- 場督器尺寸:132毫米
- 電池: 充電盒250mAh, 每個耳機30mAh
- 場臀器頻率範圍: 20Hz 20KHz
- 最大輸出功率: 18mW
- 揚聲器阻抗: 32Ω±15%
- 揚聲器靈敏度: 105±3dB
- 音頻播放時間:約3-4小時
- 通話時間:約3-4小時
- 儲存溫度: -10 c 55 c 工作溫度: 0 c 40 c
- 工作温度 · 0 C 40 C 支援藍牙配置格式:
 - A2DP, AVCTP, AVDTP, AVRCP, HFP, SPP, SMP, ATT, GAP,
 - GATT, RFCOMM, SDP, I2CAP
- 物料:ABS
- 尺寸: 58.2 x 23.9 x 45毫米(充電盒) 23.7 x 16.2 x 30.8毫米(耳機)
- 重量: 耳機: 8克(2個)/充電盒: 38克 - 藍牙配對名稱: Verbatim INE 1
- 監力配到石傳·Verballii INC i
- 有限保固:一年



首次配對藍牙:

(D)



1 使用前,請先將耳機放入充電盒,為耳 機開始推行充電。



2. 從充電盒中取出耳機後,左右耳機會 白行配對。

(R)

3. 開啟手機藍牙功能, 選擇 "Verbatim INE 1" 連接耳機。



4. 開始使用

▲ 藍牙耳櫸可能因受到其他 電子設備的干擾,有時會出現 連接不穩定情況。

法相互連接或顧智能手繼連接,請按 是和去耳機並入亦需合。

中取出耳機,然後選擇智能手機上的

使用小貼士:

- 1. 選擇適合您耳朵尺寸的耳塞及調整耳機的位置以提供最佳音質。
- 將音量調節到合適的水平,以享受最佳音樂。如果音量太大,可能 會損害到你的耳朵。

首次連接後,耳機在第二次開啟時將自動連接到智能手機。 開啟耳機:



方式1:

當耳機不在充電盒中時,長按觸控感應 器1.5秒以開啟特定的耳機。



方式2:

當耳機在充電盒內時,拿起耳機並會自 動開啟。

> ▲ 如果自動連接失敗,請在 智能手機上使用手動連接。

關閉耳機:



方式1:

長按任何一邊耳機的觸控感應器4秒,兩 邊耳機都可關掉。



方式2:

(R)

將耳機放入充電盒後自動關掉。

▲ 如果耳機仍然開啟,請將 耳機移離充電盒然後再重新放 回充電盒內。



當耳機和設備之間斷開藍牙連接3分鐘後 , 耳機會自動關掉。

觸控感應器:









雙涌道語音诵話:

語音通話來電時,您只需觸按任何一個耳機進行接聽,便可以從2個 耳機裡聽到聲音。



1. 觸按任何一個耳機接聽電話。



2.接聽通話。

- 3. 觸按任何一個耳機掛斷通話。
 - ▲ 如果有任何錯誤,請檢查 耳機佩戴是否正確。

耳機充電:



 當電池量不足時,您會聽到耳機每分鐘 重複一次的提示。



2 將耳機放入充電盒後,耳機開始進行 充雷。充雷淮行中並沒有任何I FD顯 示燈。



3. 耳機充滿電約需要1個小時。



1. 當電池電量不足, 打開充電盒時, IFD營會烹紅色10秒鐘。



2. 將充電線上的Type C端口連接到充電盒 上的Type C端口。 將充雷線的USB-A端口連接到雷腦或 充電器的USB-A端口。



3 I FD 榜將會高紅色10秒鐘, 然後熄滅 。如果接著拔除充電線,LFD燈會亮 綠色4秒鐘。

> ▲ 請經常檢查並為電池充電, 以獲得更好的雷池性能。

首次連接後,兩個耳機均可單獨使用。



用戶打開任何一個耳機,耳機都會自動連接到智能手機。



當兩個耳機在使用時,把其中一個耳機放入充電盒內,另一個耳機將繼續連接到智能手機保持運作。

耳機LED燈摘要:

1 11				
狀態	LED顯示燈			
為充電盒進行充電	紅色LED亮燈約10秒鐘,然後熄滅。			
LED呈紅色時,從充電盒中拔出 充電線	紅色LED指示燈將一直保持亮起 ,直到熄滅。			
LED熄滅時,從充電盒中拔出充 電線	綠色LED亮燈約4秒鐘。			
打開充電盒(電池為3.1V或以上 時)	綠色LED亮燈約10秒鐘,然後熄滅。			
電池電量不足時(當電池電壓降 至3.1V時)打開充電盒	紅色LED亮燈約10秒鐘,然後熄滅。			
取出耳機/放入耳機	綠色LED燈閃爍一次			

常見問題:

- 問: 为什麽耳繼在使用時會閱掉?
- 答:不小心按下鳎挖咸瘫哭可引致瓦燥闢掉。 可將瓦機放向充雷合內 **並重新拿起。**
- 問:為什麼充電盒不能充電?
- 答:檢查充電器和充電盒之間的連接,確保充電線與兩者連接良好。 如果仍然無法正常運作,請使用其他充電線。
- 問: 為什麼耳繼沒有聲音?
- 答:關掉耳機並再次重啟。 重新啟動後, 左右耳機將再次配對。
- 問: 為什麼信號不穩定?
- 答: 將手機放在前袋中可取得更好的連接效果。

▼ Verbatim.











1年有限保固 - 詳情譜瀏覽 www.verbatim.com/warranty



前言:

感谢您选购并使用VERBATIM产品,为让您能够更好的使用本产品的 所有功能,请您在正式使用本产品前,仔细阅读本手册内所提及的注 意事项以及详细功能操作说明。

注意事项:

- 请不要变更,修改或拆开此设备。内部没有用户可维修的零件。不正确的拆装可能会导致触电或火灾。
- 请不要摔落或让设备承受强烈的冲击。请不要将设备暴露在潮湿, 水,雨,雪,喷雾,热或火源的环境。
- 可用拧乾的湿棉布轻轻擦抹此设备的外壳,严禁使用其他化学溶液 清洗。
- 如在使用本产品上遇到任何问题,请联系我们的客户支持团队。
- 请勿操作已受损的设备,包括受到摔落或其他形式的损坏。
- 放置于让儿童接触不到的地方。
- 为了减少触电危险,在尝试任何维修或清洁前,必须拔除连接设备 上的任何电源。

包装内容:

 
- 2 x 耳机 (1x左, 1x 右)
- 1 x 充电盒
- 1 x USB-A 至 Type C充电线
- 3x耳塞(细,中,大)

产品规格:

- 产品名称:入耳式蓝牙5.0真无线耳机
- 蓝牙50
- 扬声器尺寸:13.2毫米
- 申池: 充申為250mAh, 每个耳机30mAh
- 扬声器频率范围: 20Hz 20KHz
- 最大输出功率: 18mW
- 扬声器阻抗:32Ω±15%
- 扬声器灵敏度: 105±3dB
- 音频播放时间:约3-4小时
- 通话时间:约3-4小时
- 储存温度: -10 c 55 c
- 工作温度:0c-40c
- 支持蓝牙配置格式:
 - A2DP, AVCTP, AVDTP, AVRCP, HFP, SPP, SMP, ATT, GAP,

GATT, RFCOMM, SDP, I2CAP

- 物料:ABS
 - 100 141 · ADC
- 尺寸: 58.2 x 23.9 x 45毫米(充电盒) 23.7 x 16.2 x 30.8毫米(耳机)
- 重量:耳机:8克(2个)/充电盒:38克蓝牙配对名称:Verbatim INE 1
- 监牙配对名称: Verbatim INE 1
- 有限质保:一年



首次配对蓝牙:



使用前,请先将耳机放入充电盒,为耳机开始进行充电。



 从充电盒中取出耳机后,左右耳机会 自行配对。



3. 开启手机蓝牙功能,选择 "Verbatim INE 1" 连接耳机。



4. 开始使用

▲ 蓝牙耳机可能因受到其他 电子设备的干扰,有时会出现 连接不稳定情况。

当耳机无法相互连接或与智能手机连接,请按照以下步骤重置耳机: 1.将左耳机和右耳机放入充电盒。 2.确保耳机处于充电模式。

从充电盒中取出耳机,然后选择智能手机上的配对ID再次连接。

使用小贴士:

- 1. 选择适合您耳朵尺寸的耳塞及调整耳机的位置以提供最佳音质。
- 将音量调节到合适的水平,以享受最佳音乐。如果音量太大,可能会损害到你的耳朵。

首次连接后,耳机在第二次开启时将自动连接到智能手机。 开启耳机:



方式1:

当耳机不在充电盒中时,长按触控感应器1.5秒以开启特定的耳机。



方式2:

当耳机在充电盒内时,拿起耳机并会自 动开启。

> ▲ 如果自动连接失败,请在 手机上使用手动连接。

关闭耳机:



方式1:

长按任何一边耳机的触控感应器4秒,两 边耳机都可关掉。



方式2:

将耳机放入充电盒后自动关掉。

▲ 如果耳机仍然开启,请将 耳机移离充电盒然后再重新放 回充电盒内。



当耳机和设备之间断开蓝牙连接3分钟后 ,耳机会自动关掉。





播放/暂停



1	▶ 下一首	=	₩ x 2 按右耳机
	★ 上一首	=	2次 x2 按左耳机 2次

按1次



双通道语音通话:

语音通话来电时,您只需触按任何一个耳机进行接听,便可以从2个耳机里听到声音。



1.触按任何一个耳机接听电话。



2.接听通话。

3. 触按任何一个耳机挂断通话。

▲ 如果有任何错误,请检查 耳机佩戴是否正确。

耳机充电:



 当电池量不足时,您会听到耳机每分钟 重复一次的提示。



将耳机放入充电盒后,耳机开始进行充电。充电进行中并没有任何LED显示灯。



3. 耳机充满电约需要1个小时。

为充电盒充电:



 当电池电量不足,打开充电盒时, LED灯会亮红色10秒钟。



2. 将充电线上的Type C端口连接到充电盒 上的Type C端口。 将充电线的USB-A端口连接到电脑或 充电器的USB-A端口。



 LED灯将会亮红色10秒钟,然后熄灭 。如果接著拔除充电线,LED灯会亮 绿色4秒钟。

> ▲ 請經常檢查並為電池充電, 以獲得更好的電池性能。

首次连接后,两个耳机均可单独使用。



 用户打开任何一个耳机,耳机都会自 动连接到智能手机。



当两个耳机在使用时,把其中一个耳机放入充电盒内,另一个耳机将继续连接到智能手机保持运作。

耳机LED灯摘要:

状态	LED显示灯
为充电盒进行充电	红色LED亮灯约10秒钟,然后熄灭。
LED呈红色时,从充电盒中拔出 充电线	红色LED指示灯将一直保持亮起 ,直到熄灭。
LED熄灭时,从充电盒中拔出充 电线	绿色LED亮灯约4秒钟。
打开充电盒(电池为3.1V或以上时)	绿色LED亮灯约10秒钟,然后熄灭。
电池电量不足时(当电池电压降 至3.1V时)打开充电盒	红色LED亮灯约10秒钟,然后熄灭。
取出耳机/放入耳机	绿色LED灯闪烁一次

堂川问题:

- 问:为什么耳机在使用时会关掉?
- 答:不小心按下钟控威应器可引致瓦机关掉。 可将瓦机放回充由仓内 并重新拿起。
- 问:为什么充电盒不能充电?
- 答:检查充电器和充电盒之间的连接,确保充电线与两者连接良好。 如果仍然无法正常运作,请使用其他充电线。
- 间:为什么耳机没有声音?
- 答:关掉耳机并再次重启。 重新启动后,左右耳机将再次配对。
- 问:为什么信号不稳定?
- 答: 将手机放在前袋中可取得更好的连接效果。

▼ Verbatim











