

**External Slimline  
CD/DVD Writer USB 2.0**

**User Manual**

Thank you for choosing this Verbatim product. Please read this manual carefully prior to use so as to fully understand the product and its correct usage.

### Package Contents:

 
- EXTERNAL SLIMLINE CD/DVD WRITER USB 2.0
- USB-A to DC POWER CABLE
- USB-A to USB-B (USB 2.0) CABLE
- USER MANUAL

### Product Specifications:

Name	External Slimline CD/DVD Writer USB 2.0
Dimensions	13.4 (L) x 13.6 (W) x 1.5 (H) cm
Interface	USB-B (USB 2.0), DC Power Jack
Part number	66817
Reading speed	CD-ROM: 24x; DVD-ROM: 8x
Burning speed	DVD+/-R: 8x; DVD+/-RW: 6x; DVD+/-R DL: 6x; CD-R: 24x; CD-RW: 16x; DVD-RAM: 5x
Read types	DVD+R / DVD+RW / DVD-ROM; DVD-R / DVD-RW / DVD-ROM; DVD+R9 (double layer); DVD-R9 (dual layer); CD-R / finalized CD-RW / CD-ROM; DVD-RAM; Video CD, Data / CD-DAE;
Burn types	DVD+/-R; DVD+/-RW; DVD+/-R DL; CD-R ; CD-RW; DVD-RAM
Burning mode	For CD-R / RW DVD-R / DVD-RW disc: 1. Disc At Once (DAO) 2. Session At Once (SAO) 3. Track At Once (TAO) 4. Variable Packet Write 5. Fixed Packet Write
Supported OS	Windows 11 / 10 / 8.1 / 7; MacOS X v 10.6 or higher; Linux
Minimum hardware requirements	<ul style="list-style-type: none"><li>• USB 3.0 or USB 2.0 port*</li><li>• At least 2GB of free hard disc space (10GB recommended)</li></ul>
Power supply	USB Powered
Power Input	5 V, Reading / Writing 1.1/1.5 A

## How to use

### Step 1

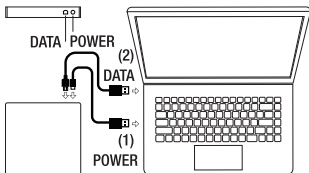

Connect "USB-A to USB-B CABLE" & "USB-A to DC Power CABLE" to the port of your PC.


(1) USB-A (power transfer)

(2) USB-A (data transfer)

For most computers, power through the data transfer port alone will be sufficient.

If the USB bus on your computer does not provide enough power to run the drive, connect (1) USB power cable "USB-A to DC Power CABLE" to PC or a 5V/1A power adapter (preferred way to get more power, separately purchase). Please avoid using an adapter with power over 1A that may cause damage to the device.

### Step 2

 

Connect the USB cables to the writer.

### Windows Connection Setting

 
1. Connect the external writer to USB port of your PC via a connecting cable. An alert will pop up on the system tray at bottom right of the screen. Driver installation will commence automatically.

2. If you click on the "Windows" short cut, the optical drive icon can be found in "Removable Storage".



DVD RW Drive (E:)

3. Double click the optical drive icon, or choose "Pop Up" from the menu by right clicking the icon, a pop-up window prompt you to insert a disc.

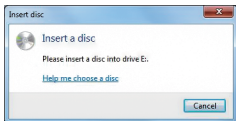

4. Insert a disc into the pop-up tray. The indicator light will turn on to signal that the writer is functioning.
5. Burning software installation is required to perform disc burning function.

#### Remarks:

- 1) If the external writer performs below expectation, please try with 5V/1A power adapter (Purchase Separately);
- 2) Playback software & burning software not included. To be purchased or downloaded separately.

### Troubleshooting

If the writer is not working as described, please check the following:

1. Ensure the driver is properly installed. Turn off anti-virus software during installation.
2. Switch to other USB ports.
3. Connect the writer directly to the PC without connecting through the hub or an extension cable.
4. If your writer fails to read: check if the disc is placed properly; clean dirt or dust on the disc recording side with a lint free cloth;

- replace with a new disc; confirm if the disc format is supported by the writer.
5. If your writer fails to playback: Check compatibility of the player software.
  6. Noise: Replace with another disc to ensure that poor disc quality is not the underlying issue.
  7. Hardware issues: Check if your system meet the minimum OS & hardware requirements.
  8. Connection Issues
    - Check if cable connected properly to your computer and the writer.
    - Check if your writer have power. Try ejecting the disc to see if the writer is getting power.
    - Check if your OS recognize the writer. If not, try inserting a disc into the drive to re-establish a connection.
    - Check if your USB port is working. If not, try another USB port or check your Universal Serial Bus Controllers in your Device Manager. Be sure to:
      - Ensure your USB driver is up-to-date.
      - Check your USB selective suspend settings. Advanced power settings may disable power to your USB port.
    - If you're using Windows, check if the Fast Startup is turned off. In Windows 10 and higher, Fast Startup disables some USB connections. Check your power options to ensure it is disabled.
    - Check if the writer is enabled. In Windows, check your device manager to ensure the writer is enabled.

### **Caution**

- Do not stare directly into laser beam.
- Do not alter, modify or disassemble the device. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject the device to strong mechanical shock or strong electromagnetic fields.

- Keep the device away from heat sources, direct sunlight, combustible sources, gas, humidity, water or other liquids.
- Do not insert any objects into the ports or openings of the device.
- Do not operate the device if it has been dropped or otherwise damaged in anyway.
- Contact your Verbatim Customer Service Centre if you have any issues when using this device.

### **FCC Compliance**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **CE Declaration**

Complied the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EC) and Low Voltage Protection 2006/95/EC.

This declaration applies to all specimens manufactured identical to

the model submitted for testing/evaluation.

EN 55032:2012+ AC:2013 (Class B)

EN 61000-3-2:2014

EN 61000-3-3:2013

AS/NZS CISPR 32:2013

EN 55024:2010

IEC 61000-4-2: 2008

IEC 61000-4-3: 2006+ A1:2007+ A2:2010

IEC 61000-4-4: 2013

IEC 61000-4-5: 2014

IEC 61000-4-6: 2013

IEC 61000-4-8: 2009

IEC 61000-4-11: 2004

## **RoHS Compliance**

This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 18 December 2006, on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments.

Substances of Very High Concern (SVHC) including 169 substances contained in Candidate List of June 20th 2016 are not present in this product range above permitted levels.

## **Note**

Verbatim may at any time revise the content of this user guide without further notice.

## **Rights**

Copyright © 2022 Verbatim. No part of this document may be reproduced in any form or by any means, for any purpose, without the express written permission of Verbatim. All rights reserved.

All other brands and product names referenced herein are property of their respective owners.

**Verbatim Australia Pty Ltd (ABN 39 005 706 374)**

**• Warranty Statement**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Verbatim Australia Pty Ltd (ABN 39 005 706 374) (“Verbatim”) provides the following warranty in relation to its goods (“Product”).

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State & Federal legislation that cannot be excluded. Nothing in this warranty is to be interpreted as excluding, restricting or modifying any State or Federal legislation applicable to the supply of goods and services which cannot be excluded, restricted or modified.

Verbatim warrants that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship for the period specified on the product packaging and/or the website from date of purchase.

If a defect appears in the Product before the end of the warranty period and Verbatim finds the Product to be defective in materials and workmanship, Verbatim will at its own discretion repair or replace the Product free of charge.

If goods presented for repair are capable of retaining user-generated data, repair of these goods may result in loss of the data.

**• Proof of Purchase**

Proof of purchase shall be required to be eligible for this warranty and to establish the commencement date of this warranty. This warranty is valid for the original purchase only and is not transferrable to a subsequent customer if the Product is sold by the original customer during the warranty period.

The term of your warranty period shall commence from the purchase date appearing on your purchase receipt from an authorised distributor, reseller or retailer and extends only for the time set forth in the Product documentation. This information can be obtained from the packaging and/or the Verbatim Australia website.



- **Returned Merchandise Authorisation**

No product may be returned to Verbatim Australia without first contacting us for a RMA (Returned Merchandise Authorisation) number. If it is determined that a Product may be defective, you will be given an authorisation number and instructions for Product return. An unauthorised return, i.e. one for which an RMA number has not been issued, will be returned to you at your expense. Authorised returns are to be shipped prepaid and insured to our Head Office in qualified packaging.

- **Warranty Claims**

- 1) If a fault covered by warranty occurs, the customer must first:
  - a) Contact Verbatim Australia Head Office using the contact details provided below; or
  - b) Return the Product to the retailer from which the Product was purchased.
- 2) Any warranty claim must be accompanied by:
  - a) Proof of purchase; and
  - b) Full details of the alleged defect.
- 3) If Verbatim or the retailer from which the Product was purchased finds no defect in the Product after inspection and testing, the customer must pay Verbatim's usual costs of service work and testing.
- 4) The customer must bear the cost of the transport to Verbatim or to and from the retailer to make the warranty claim including all insurance of the Product. Verbatim will bear the cost of the return transport to the customer once the claim has been finalised.

- **Exclusions**

The warranty will not apply where:

- 1) The Product has been repaired, altered or modified by someone other than Verbatim or an authorised repair agent;
- 2) The alleged defect in the Product is within acceptable industry variances;
- 3) Verbatim cannot establish any fault in the Product after testing and inspection;
- 4) The Product has been used other than for the purpose for which it was designed;
- 5) The defect in the Product has arisen due to the customer's

- failure to properly use and maintain the Product in accordance with Verbatim's instructions, recommendations and specifications (including applicable maintenance schedules);
- 6) The Product has been subject to abnormal conditions or use, including environment, temperature, water, fire, humidity, pressure, stress or similar;
  - 7) The defect has arisen due to abuse, misuse, neglect or accident.
- The warranty does not extend to:
    - 1) Damage or defects caused by normal wear and tear;
    - 2) General, consequential, punitive, incidental or special damages. These include loss of recorded data, interruption of use, the cost of recovery of lost data, lost profits and the cost of the installation or removal of any Products, the installation of replacement Products, and any inspection, testing or redesign caused by any defect or by the repair or replacement of Products arising from a defect in any Product.
    - 3) Incompatibility or poor performance due to specific computer or hardware used.

- **Limitations**

Verbatim makes no express warranties or representations other than set out in this warranty.

The replacement of the Product or part of the Product is the absolute limit of Verbatim's liability under this express warranty.

- **Contact Details**

Verbatim Australia Pty Ltd

Unit 6, 450 Princes Highway, Noble Park, Victoria 3174, Australia

Tel: +61 3 9790 8999 Fax: +61 3 9790 8955

 
Email: [support@verbatim.com.au](mailto:support@verbatim.com.au)

Website: [www.verbatim.com.au](http://www.verbatim.com.au)



1 Year Limited Warranty – for further details visit  
[www.verbatim.com/warranty](http://www.verbatim.com/warranty)

 Verbatim™

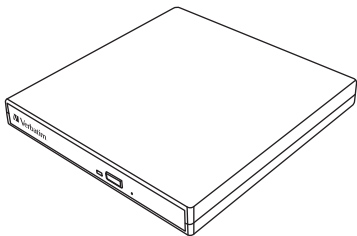

**超薄移动  
CD/DVD刻录机USB 2.0**

用户手册

感谢你选择威宝的产品。请在使用前仔细阅读本手册，以便充分了解本产品及其正确使用方法。

### 包装内容:

 
- 超薄移动 CD/DVD 刻录机 USB 2.0
- USB-A 至 DC 电源线
- USB-A 至 USB-B (USB 2.0) 连接线
- 用户手册

### 产品规格

产品名称	超薄移动 CD/DVD 刻录机 USB 2.0
尺寸	13.4 (长) x 13.6 (宽) x 1.5 (高) cm
介面	USB-B (USB 2.0), DC电源插孔
型号	66817
读取速度	CD-ROM: 24x; DVD-ROM: 8x
刻录速度	DVD+/-R: 8x; DVD+/-RW: 6x; DVD+/-R DL: 6x; CD-R: 24x; CD-RW: 16x; DVD-RAM: 5x
读取类型	DVD+R / DVD+RW / DVD-ROM; DVD-R / DVD-RW / DVD-ROM; DVD+R9 (双层); DVD-R9 (双层); CD-R / 已封盘CD-RW / CD-ROM; DVD-RAM; Video CD, Data / CD-DAE;
刻录类型	DVD+/-R; DVD+/-RW; DVD+/-R DL; CD-R; CD-RW; DVD-RAM
刻录模式	CD-R / RW DVD-R / DVD-RW 光盘: 1. 一次性记录 (DAO) 2. 一次性区段记录 (SAO) 3. 一次性音轨记录 (TAO) 4. 可变数据包写入 5. 固定数据包写入
支持的操作 系统	支持 Windows 11 / 10 / 8.1 / 7 操作系统; MacOS X v 10.6或更高版本; Linux
最低硬件要求	• USB 3.0 或 USB 2.0 接口* • 至少 2GB 可用硬盘空间 (建议10GB)
电源	USB 供电
电源输入	5 V, 读 / 写 1.1/1.5 A

## 如何使用

### 第一步骤

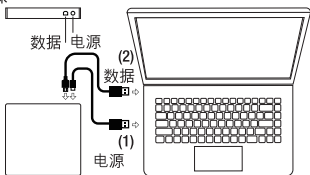


将“USB-A 至 USB-B 连接线”和“USB-A 至 DC 电源线”连接到您的计算机接口。

(1) USB-A (数据传输)

(2) USB-A (电源传输)

对于大多数计算机，仅通过数据传输接口供电就足够了。如果您计算机上的USB总线无法提供足够的电源来运行刻录机，请将 (1) USB 电源线“USB-A 至 DC 电源线”连接到计算机或 5V/1A 电源适配器 (首选方式以获得更多电源，需单独购买)。请避免使用功率超过 1A 的适配器，否则可能会损坏设备。

### 第二步骤

 

将 USB 连接线连接到刻录机


### 安装Windows 驱动程序

 1. 通过连接线将刻录机连接到计算机的 USB 接口。在屏幕右下方的系统托盘上会弹出一个提示。驱动程序的安装将自动开始。

2. 如果你点击 "Windows "快捷键，可以在 "可移动存储 "中找到光驱图标。



3. 双击光驱图标，或者从菜单中选择 "Pop Up"，右击图标，弹出窗口提示您插入光盘。

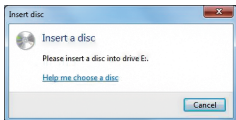

4. 在弹出式托盘中插入一张光盘。指示灯将亮起，提示刻录机正在运行。
5. 需要安装刻录软件来执行光盘刻录功能。

备注:

- 1) 如果外部刻录机的性能低于预期，请使用 5V/1A 的电源适配器 (需单独购买) 进行尝试。
- 2) 不包括播放软件和刻录软件。需单独购买或下载。

## 疑难解答

如果刻录机不能像预期的那样工作，请检查以下内容:

1. 确保驱动程序已正确安装。在安装过程中关闭防病毒软件。
2. 切换到其他 USB 接口。
3. 将刻录机直接与计算机连接，不要通过集线器或延长线连接。
4. 如果刻录机无法读取：检查光盘是否放置正确；用无绒布清洁光盘记录面的污垢或灰尘；更换新光盘；确认刻录机是否支持光盘格式。
5. 如果你的刻录机不能播放。检查播放器软件的兼容性。
6. 有噪音。用另一张光盘替换，以确保光盘质量差不是根本问题。

7. 硬件问题：检查您的系统是否满足最低操作系统和硬件要求。

## 8. 连接问题

- 检查电线是否正确连接到您的计算机和刻录机。
- 检查您的刻录机是否已通电。尝试弹出光盘以查看刻录机是否通电。
- 检查您的作业系统能否识别刻录机。如果没有，请尝试将光盘插入刻录机以重新建立连接。
- 检查您的 USB 接口是否正常工作。如果没有，请尝试另一个 USB 接口或在设备管理器中检查您的通用串型总线控制器。

以确认：

- 确保您的 USB 驱动程序是最新的。
- 检查您的 USB 选择性暂停设置。高级电源设置可能被停用了 USB 接口的电源。
- 如果您使用的是 Windows，请检查快速启动是否已关闭。在 Windows 10 或更高版本中，快速启动会停用某些 USB 连接。检查您的电源选项以确保它被停用。
- 检查是否启用了刻录机。在 Windows 中，检查您的设备管理器以确保启用了刻录机。

## 注意事项

- 请不要直接盯著激光束看。
- 请勿改变、修改或拆卸装置。内部没有用户可维修的部件。不正确的重新组装可能会导致冲击或火灾危险。
- 请勿掉落或使设备受到强烈的机械冲击或强电磁场的影响。
- 保持设备远离热源、阳光直射、可燃源、气体、潮湿源、水或其他液体。
- 请勿将任何物体插入设备的接口或开口中。
- 如果设备掉落或受到其他任何损坏，请不要操作该设备。
- 如果你在使用本设备时有任何问题，请联系威宝的客户服务服务中心。

## **符合FCC标准**

本设备已经过测试，符合FCC规则第15部分规定的B类数字设备的限制。这些限制旨在提供合理的保护，防止住宅安装中的有害干扰。本设备产生、使用并能辐射无线电频率能量，如果不按照说明安装和使用，可能会对无线电通信造成有害干扰。然而，不能保证在特定的安装中不会发生干扰。如果本设备确实对无线电或电视接收造成有害干扰，可以通过关闭和开启设备来确定，鼓励用户尝试通过以下一种或多种方式来纠正干扰：

- 调整接收天线的方向或重新定位。
- 增加设备和接收器之间的间隔。
- 将设备连接到一个与接收机所连接的电路不同的插座上。
- 将设备连接到与接收器连接的电路不同的插座上。
- 请咨询经销商或有经验的无线电/电视技术人员的帮助。

## **CE声明**

符合理事会关于成员国电磁兼容性 (2014/30/EC) 和低电压保护 (2006/95/EC) 的近似法律的指令中的要求。

本声明适用于所有与提交测试/评估的模型相同的制造样本。

EN 55032:2012+ AC:2013 (Class B)

EN 61000-3-2:2014

EN 61000-3-3:2013

AS/NZS CISPR 32:2013

EN 55024:2010

IEC 61000-4-2: 2008

IEC 61000-4-3: 2006+ A1:2007+ A2:2010

IEC 61000-4-4: 2013

IEC 61000-4-5: 2014

IEC 61000-4-6: 2013

IEC 61000-4-8: 2009

IEC 61000-4-11: 2004



## 符合RoHS标准

本产品符合欧洲议会和理事会2006年12月18日关于限制在电气和电子设备中使用某些有害物质 (RoHS)的指令2011/65/EU及其修正案。

高度关注物质 (SVHC)，包括2016年6月20日候选清单中的169种物质，在本产品范围内没有超过允许水平。

## 注意事项

威宝可能会在任何时候修改本用户指南的内容，而不再另行通知。

 
## 权利

Copyright © 2022 Verbatim. 未经威宝明确的书面许可，本文件的任何部分都不得以任何形式或手段，出于任何目的进行复制。保留所有权利。

此处提及的所有其他品牌和产品名称是其各自所有者的财产。



1年有限质保 - 详情请访问  
[www.verbatim.com/warranty](http://www.verbatim.com/warranty)

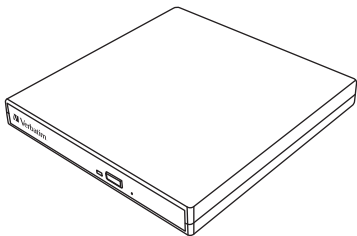

**超薄便攜式  
CD/DVD刻錄機USB 2.0**

用戶手冊

感謝你選擇威寶的產品。請在使用前仔細閱讀本手冊，以便充分了解本產品及其正確使用方法。

### 包裝內容:

 
- 超薄便攜式 CD/DVD 刻錄機 USB 2.0
- USB-A 至 DC 電源線
- USB-A 至 USB-B (USB 2.0) 連接線
- 用戶手冊

### 產品規格

產品名稱	超薄便攜式 CD/DVD 刻錄機 USB 2.0
尺寸	13.4 (長) x 13.6 (寬) x 1.5 (高) cm
介面	USB-B (USB 2.0) , DC電源插孔
型號	66817
讀取速度	CD-ROM: 24x; DVD-ROM: 8x
刻錄速度	DVD+/-R: 8x; DVD+/-RW: 6x; DVD+/-R DL: 6x; CD-R: 24x; CD-RW: 16x; DVD-RAM: 5x
讀取類型	DVD+R / DVD+RW / DVD-ROM; DVD-R / DVD-RW / DVD-ROM; DVD+R9 (雙層); DVD-R9 (雙層); CD-R / 已封盤CD-RW / CD-ROM; DVD-RAM; Video CD, Data / CD-DAE;
刻錄類型	DVD+/-R; DVD+/-RW; DVD+/-R DL; CD-R; CD-RW; DVD-RAM
刻錄模式	CD-R / RW DVD-R / DVD-RW 光碟: 1. 一次性記錄 (DAO) 2. 一次性區段記錄 (SAO) 3. 一次性音軌記錄 (TAO) 4. 可變數據包寫入 5. 固定數據包寫入
支援的操作系統	支援 Windows 11 / 10 / 8.1 / 7 操作系統 ; MacOS X v 10.6 或更高版本 ; Linux
最低硬件要求	• USB 3.0 或 USB 2.0 接口* • 至少 2GB 可用硬盤空間 (建議10GB)
電源	USB供電
電源輸入	5V , 讀 / 寫 1.1/1.5 A

## 如何使用

### 第一步驟

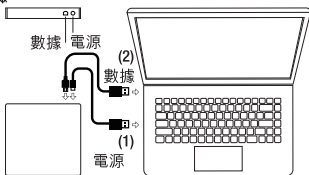

將“USB-A 至 USB-B 連接線”和“USB-A 至 DC 電源線”連接到您的電腦接口。


(1) USB-A (數據傳輸)

(2) USB-A (電源傳輸)

對於大多數電腦，僅通過數據傳輸接口供電就足夠了。

如果您電腦上的USB總線無法提供足夠的電源來運行刻錄機，請將 (1) USB 電源線“USB-A 至 DC 電源線”連接到電腦或 5V/1A 電源適配器 (首選方式以獲得更多電源，需單獨購買)。請避免使用功率超過 1A 的適配器，否則可能會損壞設備。

### 第二步驟

 

將 USB 連接線連接到刻錄機


## 安裝Windows 驅動程序

 1. 通過連接線將刻錄機連接到電腦的 USB 接口。在屏幕右下方的系統托盤上會彈出一個提示。驅動程序的安裝將自動開始。

2. 如果你點擊 "Windows "快捷鍵，可以在 "可移動存儲 "中找到光驅圖標。



3. 雙擊光驅圖標，或者從菜單中選擇 "Pop Up"，右擊圖標，彈出窗口提示您插入光碟。

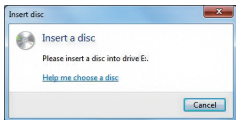

4. 在彈出式托盤中插入一張光碟。指示燈將亮起，提示刻錄機正在運行。
5. 需要安裝刻錄軟件來執行光碟刻錄功能。

備註:

- 1) 如果外部刻錄機的性能低於預期，請使用 5V/1A 的電源適配器 (需單獨購買) 進行嘗試。
- 2) 不包括播放軟件和刻錄軟件。需單獨購買或下載。

## 疑難解答

如果刻錄機不能像預期的那樣工作，請檢查以下內容:

1. 確保驅動程序已正確安裝。在安裝過程中關閉防病毒軟件。
2. 切換到其他 USB 接口。
3. 將刻錄機直接與電腦連接，不要通過集線器或延長線連接。
4. 如果刻錄機無法讀取：檢查光碟是否放置正確；用無絨布清潔光碟記錄面的污垢或灰塵；更換新光碟；確認刻錄機是否支援光碟格式。
5. 如果你的刻錄機不能播放。檢查播放器軟件的兼容性。
6. 有噪音。用另一張光碟替換，以確保光碟質量差不是根本問題。

7. 硬件問題：檢查您的系統是否滿足最低操作系統和硬件要求。

## 8. 連接問題

- 檢查電線是否正確連接到您的電腦和刻錄機？
- 檢查您的刻錄機是否已通電。嘗試彈出光碟以查看刻錄機是否通電。
- 檢查您的作業系統能否識別刻錄機。如果沒有，請嘗試將光碟插入刻錄機以重新建立連接。
- 檢查您的 USB 接口是否正常工作。如果沒有，請嘗試另一個 USB 接口或在裝置管理員中檢查您的通用序列匯流排控制器。  
以確認：
  - 確保您的 USB 驅動程序是最新的。
  - 檢查您的 USB 選擇性暫停設置。進階電源設定可能被停用了 USB 接口的電源。
- 如果您使用的是 Windows，請檢查快速啟動是否已關閉。在 Windows 10 或更高版本中，快速啟動會停用某些 USB 連接。檢查您的電源選項以確保它被停用。
- 檢查是否啟用了刻錄機。在 Windows 中，檢查您的裝置管理員以確保啟用了刻錄機。

## 注意事項

- 請不要直接盯著激光束看。
- 請勿改變、修改或拆卸裝置。內部沒有用戶可維修的部件。不正確的重新組裝可能會導致衝擊或火災危險。
- 請勿掉落或使設備受到強烈的機械衝擊或強電磁場的影響。
- 保持設備遠離熱源、陽光直射、可燃源、氣體、潮濕源、水或其他液體。
- 請勿將任何物體插入設備的接口或開口中。
- 如果設備掉落或受到其他任何損壞，請不要操作該設備。
- 如果你在使用本設備時有任何問題，請聯繫威寶的客戶服務中心。

## **符合FCC標準**

本設備已經過測試，符合FCC規則第15部分規定的B類數字設備的限制。這些限制旨在提供合理的保護，防止住宅安裝中的有害干擾。本設備產生、使用並能輻射無線電頻率能量，如果不按照說明安裝和使用，可能會對無線電通信造成有害干擾。然而，不能保證在特定的安裝中不會發生干擾。如果本設備確實對無線電或電視接收造成有害干擾，可以通過關閉和開啟設備來確定，鼓勵用戶嘗試通過以下一種或多種方式來糾正干擾：

- 調整接收天線的方向或重新定位。
- 增加設備和接收器之間的間隔。
- 將設備連接到一個與接收機所連接的電路不同的插座上。
- 將設備連接到與接收器連接的電路不同的插座上。
- 請諮詢經銷商或有經驗的無線電/電視技術人員的幫助。

## **CE聲明**

符合理事會關於成員國電磁兼容性 (2014/30/EC) 和低電壓保護 (2006/95/EC) 的近似法律的指令中的要求。

本聲明適用於所有與提交測試/評估的模型相同的製造樣本。

EN 55032:2012+ AC:2013 (Class B)

EN 61000-3-2:2014

EN 61000-3-3:2013

AS/NZS CISPR 32:2013

EN 55024:2010

IEC 61000-4-2: 2008

IEC 61000-4-3: 2006+ A1:2007+ A2:2010

IEC 61000-4-4: 2013

IEC 61000-4-5: 2014

IEC 61000-4-6: 2013

IEC 61000-4-8: 2009

IEC 61000-4-11: 2004

## 符合RoHS標準

本產品符合歐洲議會和理事會2006年12月18日關於限制在電氣和電子設備中使用某些有害物質 (RoHS)的指令2011/65/EU及其修正案。

高度關注物質 (SVHC)，包括2016年6月20日候選清單中的169種物質，在本產品範圍內沒有超過允許水平。

## 注意事項

威寶可能會在任何時候修改本用戶指南的內容，而不再另行通知。

## 權利

Copyright © 2022 Verbatim. 未經威寶明確的書面許可，本文件的任何部分都不得以任何形式或手段，出於任何目的進行複製。保留所有權利。

此處提及的所有其他品牌和產品名稱是其各自所有者的財產。



1年有限保固 - 詳情請瀏覽  
[www.verbatim.com/warranty](http://www.verbatim.com/warranty)