 




QUICK START GUIDE
SCHNELLSTARTANLEITUNG
GUIDE DE DÉMARRAGE RAPIDE
快速入門指南

SnapQub Wireless Power Bank
10000 mAh Qi2.2
2 X USB-C Cables
WPB10Q22, 32362, 32363

SnapQub 無線充行動電源
10000 mAh Qi2.2
2 X USB-C 充電線
WPB10Q22, 32362, 32363

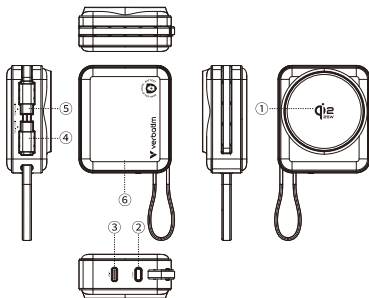

 
1. Wireless charging pad (magnetic) (Qi2.2: output max. 25 W)
2. Power button
3. USB-C port (input max. 30 W; output max. 45 W)
4. Type-C1 cable (input max. 30 W; output max. 45 W)
5. Type-C2 cable (output max. 12 W)
6. LED display

How it works

1. Charging the Power Bank


Using the USB-C1 port

- Connect a suitable USB-C cable (not included) to the USB-C port on the power bank.
- Connect the other side of the cable with an USB AC adaptor (not included).

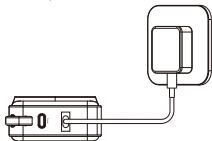

Using the built-in Type-C1 cable

 - Take out the Type-C1 cable of the power bank.
- Connect the Type-C1 cable to an USB AC adaptor (not included).



LED display

 
- LED display will show the remaining capacity of the battery. Single digit will flash when charge-in.
- In fast charging mode, green indicator will turn on.



2. Charging devices with the Power Bank

A. Wireless Charging

- Place your smartphone on the charging pad and power bank will initiate wireless charging.
- If the wireless charging cannot start automatically, press Power button for charging.

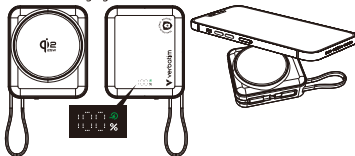

Note: Charging pad is magnetic. Smartphones supporting magnetic charging will be magnetically attached to the power bank.

For smartphones without magnetic charging, a metal ring (not included) can be used to attach to the smartphone to achieve the magnetic function. Otherwise, the power bank can still be used to wireless charging the smartphones without magnetic function.

B. Charging devices with cable

- Use the integrated cables for charging. Choose the suitable cable for the device. Plug the connector to the device and it will initiate charging automatically.
- Connect the charging cable for your phone with USB-C port of the power bank.

C. Charging more than once device

- You can choose any combination of the ports and cables on the power bank for charging a maximum of 4 devices at one time.
- The charging power will be 15 W maximum sharing among all the devices.

How it works

D. Charging and discharging simultaneously

- The power bank allows charging in and out with any of the ports and cables simultaneously.
- When charging in and using wireless charging only: Input 27 W max., wireless output 7.5 W max.
- When charging in and using different combination of output together: input 15 W max., output 15 W max.

LED display

- LED display will show the remaining capacity of the battery.
- In fast charging mode or wireless charging, green indicator will turn on.

Specifications

- Battery Model: Li-Polymer Battery (Semi-solid-state battery)/ 105555/ 3.85 V/ 5000 mAh x 2
- Battery Capacity: 10000 mAh/38.5 Wh
- Dimensions (approx.): 77.2mm x 66.6mm x 31.4mm
- Weight (approx.): 225g
- Input max. power: USB-C port & Type-C1 cable: 30 W
- Output max. power: USB-C port & Type-C1 cable: 45 W/ Type-C2 cable: 12W / Wireless: 25 W
- Wireless distance: 3mm - 6mm
- Operating temperature: 0 ~ 35°C/ 32 ~ 95 °F
- Humidity: 50 ~ 85%

Safety Protection:

- FOD Protection*
- Short circuit protection
- Over current protection
- Over temperature protection
- Over charge voltage protection
- Over discharge voltage protection

* The power bank detects any foreign objects on charging area and stop the wireless charging for safety protection.

Important Safety Instructions

Please read and follow these instructions carefully before using your power bank.

- Use **only** as directed. Incorrect use may cause overheating, leakage, fire, explosion, or injury.
- Do not expose the product to fire, heat, moisture, water, rain, or snow.
- Do not crush, puncture, or drop the product. Stop using immediately if it becomes damaged, swollen, smoking, or excessively hot.
- Do not disassemble, modify, or repair the device yourself. There are no user-serviceable parts inside.
- Avoid contact with corrosive materials and do not clean with harsh chemicals or detergents.
- Do not insert foreign objects into the ports or openings.
- Charge **only** in a well-ventilated area and on a non-flammable surface (eg. concrete, ceramic, etc) under supervision.
- Do not charge the power bank inside bags, bedding, or other enclosed spaces.
- Disconnect the device immediately if it or the cable becomes hot. Unplug once fully charged - avoid leaving connected continuously.
- Allow the power bank to cool after use and before recharging.
- Do not store or use the product in high temperatures, direct sunlight, or inside parked vehicles.
- Store in a cool, dry, and well-ventilated place at -20°C to $+45^{\circ}\text{C}$ (-4°F to $+113^{\circ}\text{F}$).
- If storing for a long period, charge to 50–80% capacity before putting away.
- Keep out of reach of children and pets.
- This product should **only** be used by persons with adequate knowledge and supervision. Children or individuals with reduced capabilities should use it **only** under adult supervision.
- Do not place the power bank in household waste. Dispose of it at an approved battery or e-waste recycling facility.
- If the power bank catches fire, move it away from flammable materials. Do not use water- use a dry chemical or Class D fire extinguisher if safe to do so.

Important Safety Instructions

- When travelling by air, carry the power bank only in hand luggage, as required by airline and IATA regulations.
- Please do not put the magnetic wireless charger close to cards with magnetic stripes or chips (ID Card, credit card etc.) to avoid demagnetization.
- Please keep magnetic wireless charger at least 20 cm distance away from implantable medical devices (heart pacemaker, implantable cochlea etc.) to avoid potential interferences.

Disposal :

Do not dispose of the power bank in household rubbish, recycling bins, or hard waste collections, as it may pose a fire risk and contains materials that can be harmful to the environment.

Take it to an authorised battery or e-waste drop-off point for safe and responsible recycling.

Verbatim may at any time revise the content of this user guide without further notice.

Rights

Copyright © 2026 Verbatim. No part of this document may be reproduced in any form or by any means, for any purpose, without the express written permission of Verbatim.

All rights reserved.

All other brands and product names referenced herein are property of their respective owners.

Verbatim warrants this product to be free from defects in material and workmanship for a period of 2 years from date of purchase.

This warranty excludes batteries.

If this product is found to be defective within the warranty period, it will be replaced at no cost to you.

You may return it with your original cash register receipt to the place of purchase or contact Verbatim.

Product replacement is your sole remedy under this warranty, and this warranty does not apply to normal wear or to damage resulting from abnormal use, misuse, abuse, neglect or accident, or to any incompatibility or poor performance due to the specific computer software or hardware used.

VERBATIM WILL NOT BE LIABLE FOR DATA LOSS OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, HOWEVER CAUSED, FOR BREACH OF WARRANTIES OR OTHERWISE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or country to country.

Warranty Statement

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Verbatim Australia Pty Ltd (ABN 39 005 706 374) ("Verbatim") provides the following warranty in relation to its goods ("Product").

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State & Federal legislation that cannot be excluded. Nothing in this warranty is to be interpreted as excluding, restricting or modifying any State or Federal legislation applicable to the supply of goods and services which cannot be excluded, restricted or modified.

Verbatim warrants that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship for the period specified on the product packaging and/or the website from date of purchase.

If a defect appears in the Product before the end of the warranty period and Verbatim finds the Product to be defective in materials and workmanship, Verbatim will at its own discretion repair or replace the Product free of charge.

If Products presented for repair are capable of retaining user-generated data, repair of these Products may result in loss of the data. You are responsible for the back-up of any data on any such Product prior to returning the Product under this warranty.

Proof of Purchase

Proof of purchase must be retained to be eligible for this warranty and to establish the commencement date of this warranty. This warranty is valid for the original purchase only and is not transferrable to a subsequent customer if the Product is sold by the original customer during the warranty period.

The term of your warranty period shall commence from the purchase date appearing on your purchase receipt from an authorised distributor, reseller or retailer and extends only for the time set forth in the Product documentation. This information can be obtained from the packaging and/or the Verbatim Australia website.

Returned Merchandise Authorisation

No Product may be returned to Verbatim Australia without first contacting us for a RMA (Returned Merchandise Authorisation) number. If it is determined that a Product may be defective, you will be given an authorisation number and instructions for Product return. An unauthorised return, i.e. one for which an RMA number has not been issued, will be returned to you at your expense. Authorised returns are to be shipped prepaid and insured to our Head Office in qualified packaging.

Notice to Customer Relating to Repair of Goods

Verbatim Australia will not accept Products for repair unless we have provided the consumer with a Notice to Customer Relating to Repair of Goods that complies with regulations. As the notice relates to the repair of goods that store user-generated data, the repairer's Notice states that the repair of goods may result in loss of data. Since it is also our practice to supply refurbished Products as an alternative to repairing a consumer's defective Product, our notice specifies that the Product presented for repair may be replaced by a refurbished Product of the same type rather than being repaired. The Repairer's Notice will be issued at the same time that we issue an RMA number. This statement is also available on the Verbatim Australia website.

Warranty Claims

- 1) If a fault covered by warranty occurs, the customer must first:
 - a) Contact Verbatim Australia Head Office using the contact details provided below; or
 - b) Return the Product to the retailer from which the Product was purchased.
- 2) Any warranty claim must be accompanied by:
 - a) Proof of purchase; and
 - b) Full details of the alleged defect.
- 3) If Verbatim or the retailer from which the Product was purchased finds no defect in the Product after inspection and testing, the customer must pay Verbatim's usual costs of service work and testing.
- 4) The customer must bear the cost of the transport to Verbatim or to and from the retailer to make the warranty claim including all insurance of the Product. Verbatim will bear the cost of the return transport to the customer once the claim has been finalised.

Exclusions

The warranty will not apply where:

- 1) the Product has been repaired, altered or modified by someone other than Verbatim or an authorised repair agent;
- 2) the alleged defect in the Product is within acceptable industry variances;
- 3) Verbatim cannot establish any fault in the Product after testing and inspection;
- 4) the Product has been used other than for the purpose for which it was designed;
- 5) the defect in the Product has arisen due to the customer's failure to properly use and maintain the Product in accordance with Verbatim's instructions, recommendations and specifications (including applicable maintenance schedules);
- 6) the Product has been subject to abnormal conditions or use, including environment, temperature, water, fire, humidity, pressure, stress or similar; or
- 7) the defect has arisen due to abuse, misuse, neglect or accident.

The warranty does not extend to:

- 1) damage or defects caused by normal wear and tear;
- 2) general, consequential, punitive, incidental or special damages. These include loss of recorded data, interruption of use, the cost of recovery of lost data, lost profits and the cost of the installation or removal of any Products, the installation of replacement Products, and any inspection, testing or redesign caused by any defect or by the repair or replacement of Products arising from a defect in any Product; or
- 3) incompatibility or poor performance due to specific computer or hardware used.

Limitations

Verbatim makes no express warranties or representations other than set out in this warranty. The replacement of the Product or part of the Product is the absolute limit of Verbatim's liability under this express warranty.

Contact Details

 
Verbatim Australia Pty Ltd

36-40 Pacific Drive Keysborough, Victoria, 3173 Australia

Tel: +61 3 9790 8999 Fax: +61 3 9790 8955

Email: support@verbatim.com.au

Website: www.verbatim.com.au

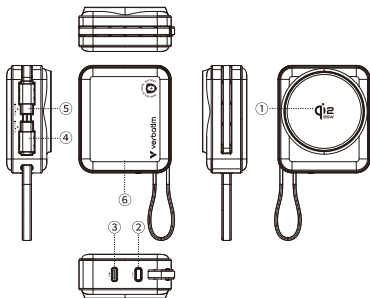


1. 無線充電位置 (磁吸) (Qi2.2: 最大輸出 25 W)
2. Power 按鍵
3. USB-C 端口 (最大輸入 30 W; 最大輸出 45 W)
4. Type-C1 充電線 (最大輸入 30 W; 最大輸出 45 W)
5. Type-C2 充電線 (最大輸出 12 W)
6. LED 顯示

使用指示

1. 給可充電式行動電源充電


使用連接線 USB-C 端口

 - 將 USB-C 連接線 (不包含在產品內) 連接到行動電源的 USB-C 端口。
- 將連接線的另一端連接到 USB AC 電源轉換器 (不包含在產品內)。

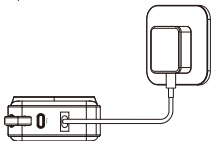

使用內置的 Type-C1 線材

 - 取出行動電源內置的 Type-C1 充電線。
- 將 Type-C1 線連接至 USB AC 變壓器 (不包含在產品內)。



LED 顯示

 
- 充電時 LED 顯示剩餘用量，個位數字會閃爍表示行動電源在充電。
- 當快充啟動，綠色顯示燈會亮起。



2. 以行動電源給設備充電

A. 無線充電

- 把智能手機放在充電板上，行動電源會啟動無線充電。
- 如無線充電未自動啟動，請按下 Power 鍵啟動行動電源，以開始無線充電。

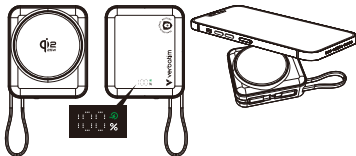

注意： 充電板備有磁吸功能。智能手機備有磁吸無充的會吸在行動電源上。如智能手機沒有磁吸功能，可以使用金屬環（不包含在產品內）來使用磁吸功能。否則，行動電源仍然可以提供普通的無線充功能給智能手機充電。

B. 以充電線給設備充電

- 使用內置的 Type-C 充電線，選擇合適輸出的充電接頭，把接頭插在設備對應的充電位置，設備將自動充電。
- 使用對應手機的充電線與移動電源的 Type-C 端口接上。

C. 給多於一台設備充電

- 用戶可按需要行動電源上的各輸出端口及充電線同時為不多於 4 個設備充電。
- 行動電源總輸出為 15 W 分配給所有設備。

D. 同時充放電

- 用戶可以以充電線通過 Type-C 口給行動電源充電並同時以無線充輸出端口或附帶的充電線為其他設備充電。
- 當只使用無線充電時：最高輸入 27 W，最高輸出 7.5 W。
- 當同時使用不同充電時：最高輸入 15 W，最高輸出 15 W。

LED 顯示

- 充電時 LED 顯示剩餘用量。
- 當快充或無線啟動，綠色顯示燈會亮起。

規格

- 電池型號: 鋰離子電池 (半固態電池) / 105555/ 3.85 V/ 5000 mAh x 2
- 電池容量: 10000 mAh/38.5 Wh
- 體積 (大概): 77.2mm x 66.6mm x 31.4mm
- 淨重 (大概): 225g
- 最大輸入: USB-C 端口 / Type-C1 充電線: 30 W
- 最大輸出: USB-C 端口 / Type-C1 充電線: 45 W / Type-C2 充電線: 12 W / 無線充電: 25 W
- 無線統距離: 3mm - 6mm
- 運作溫度: 0 ~ 35°C/ 32 ~ 95 °F
- 濕度: 50 ~ 85%

安全防護:

- FOD 保護 *
 - 短路保護
 - 過流保護
 - 過溫保護
 - 過充保護
 - 過放保護
- * 移動電源檢測到有異物在無線充電範圍並停止充電。

請仔細閱讀說明並按照指示使用產品。

- 請務必依照指示使用。使用不當可能導致過熱、洩漏、火災、爆炸或人身傷害。
- 請勿將產品暴露於火、熱源、潮濕環境、水、雨水或雪中。
- 請勿擠壓、刺穿或掉落本產品。若產品出現破損、膨脹、冒煙或過熱等情況，請立即停止使用。
- 請勿自行拆卸、改裝或修理本設備。設備內部沒有使用者可自行維修的零件。
- 避免接觸腐蝕性物質，不要使用強力化學物質或清潔劑進行清潔。
- 請勿將異物插入連接埠或開口。
- 在監督下進行充電。僅在通風良好的地方和不可燃表面（例如混凝土、陶瓷等）上。
- 請勿在封閉空間內為行動電源充電。
- 若裝置或充電線發熱，請立即中斷連線。充電後請拔掉電源，避免長時間連接。
- 使用後，請讓行動電源冷卻後再進行充電。
- 請勿在高溫、陽光直射或停放的車輛內存放或使用本產品。
- 請存放於陰涼、乾燥、通風良好的地方，溫度為 -20°C 至 $+45^{\circ}\text{C}$ (-4°F 至 $+113^{\circ}\text{F}$)。
- 若要長時間存放，存放前請充電至 50-80% 的容量。
- 請將本品放在兒童和寵物接觸不到的地方。
- 本產品僅限具備足夠知識與能力的人員在成人監督下使用。兒童或能力有限者應在成人監督下使用。
- 請勿將行動電源丟棄為生活垃圾。請送至經認可的電池或電子垃圾回收設施處理。
- 如果行動電源著火，請將其移離易燃物品。切勿用水滅火——在確保安全的情況下，請使用乾粉滅火器或D類滅火器。
- 搭乘飛機旅行時，請依照航空公司和國際航空運輸協會 (IATA) 的規定，將行動電源放在手提行李中攜帶。
- 請勿將磁性無線充電器靠近有磁條或晶片的卡片（身分證、信用卡等），以免卡片消磁。
- 請將磁性無線充電器與植入式醫療設備（心臟起搏器、植入式耳蝸等）保持至少 20 公分的距離，以避免潛在的干擾。

處理

請勿將行動電源丟棄在生活垃圾、回收箱或大型垃圾收集箱 因為它可能造成火災隱患，並且含有對環境有害的材料。

請將其送至授權的電池或電子垃圾回收點進行安全及負責的回收。

Verbatim 可能隨時修改本使用者指南的內容，恕不另行通知。

版權

版權所有© 2026 Verbatim。未經 Verbatim 明確書面許可，不得以任何形式或任何方式複製本文檔的任何部分。

版權所有。

本文所引用的所有其他品牌和產品名稱均為其各自所有者的財產。

Verbatim 有限保修條款

Verbatim 保證本產品自購買日起 2 年內不存在材料和工藝缺陷。此保固不包括電池。如果在保固期內發現本產品有缺陷，我們將免費為您更換。您可以將其與購買收據一起退回購買地點或聯絡 Verbatim。

根據本保固條款，產品更換是您的唯一補救措施，本保固不適用於正常磨損或因非正常使用、誤用、濫用、疏忽或事故造成的損壞，或因特定電腦軟體或硬體而導致的任何不相容或性能不佳用過的。

對於因違反保證或其他原因而造成的資料遺失或任何意外、後果性或特殊損害 (無論何種原因造成)，Verbatim 概不負責。

本保固賦予您特定的合法權利，您也可能擁有因州或國家而異的其他權利。

Technical Support and Documentation

- (EN)** To download the user manual, access frequently asked questions or contact the Verbatim support team, please go to – www.verbatim.com/support.
- (F)** Pour télécharger le manuel d'utilisation, accéder aux questions fréquemment posées ou contacter l'équipe d'assistance Verbatim, veuillez vous rendre sur – www.verbatim.com/support.
- (DE)** Um die Betriebsanleitung herunterzuladen, auf häufig gestellte Fragen zuzugreifen oder das Verbatim-Supportteam zu kontaktieren, gehen Sie bitte auf – www.verbatim.com/support.
- (NL)** Om de gebruikershandleiding te downloaden, veeggestelde vragen te raadplegen of contact op te nemen met het Verbatim-ondersteuningsteam, gaat u naar – www.verbatim.com/support.
- (IT)** Per scaricare il manuale utente, vedere le risposte alle domande più frequenti o contattare il team di Assistenza Verbatim, visita la pagina – www.verbatim.com/support.
- (ES)** Para descargar el manual de usuario, acceder a las preguntas más frecuentes o ponerse en contacto con el equipo de asistencia de Verbatim, visite – www.verbatim.com/support.
- (PT)** Para descarregar o manual do utilizador, aceder às perguntas mais frequentes ou contactar a equipa de apoio Verbatim, por favor vá a – www.verbatim.com/support.
- (PL)** Aby pobrać instrukcję obsługi, uzyskać odpowiedzi na często zadawane pytania lub skontaktować się z zespołem pomocy technicznej, proszę przejść na stronę www.verbatim.com/support.
- (RU)** Чтобы загрузить руководство пользователя, ознакомиться с часто задаваемыми вопросами или связаться со службой поддержки Verbatim, перейдите по адресу – www.verbatim.com/support.
- (CZ)** Chcete-li si stáhnout uživatelskou příručku, získat přístup k často kladeným otázkám nebo kontaktovat tým podpory společnosti Verbatim, přejděte na stránku – www.verbatim.com/support.

Important Safety Instructions

(HU) A felhasználói kézikönyv letöltéséhez, a gyakran ismételt kérdések eléréséhez vagy a Verbatim ügyfélszolgálatával való kapcsolatfelvételhez kérjük, látogasson el a www.verbatim.com/support weboldalra.

(HR/SR) Za preuzimanje korisničkog priručnika, pristupite često postavljanim pitanjima ili kontaktirajte Verbatim tim za podršku, idite na – www.verbatim.com/support.

(SK) Ak si chcete stiahnuť používateľskú príručku, získať prístup k často kladeným otázkam alebo kontaktovať tím podpory spoločnosti Verbatim, prejdite na – www.verbatim.com/support.

(RO) Pentru a descărca manualul de utilizare, pentru a accesa întrebările frecvente sau pentru a contacta echipa de asistență Verbatim, vă rugăm să accesați – www.verbatim.com/support.

(TR) Kullanım kılavuzunu indirmek, sık sorulan sorulara erişmek veya Verbatim destek ekibiyle iletişime geçmek için lütfen şu adrese gidin – www.verbatim.com/support.

(TC) 關於常見問題的解答，可以下載產品使用手冊或聯繫 Verbatim 的支援團隊，請登入 - www.verbatim.com/support。

(SC) 关于常見問題的解答，可以下載產品使用手冊或联系 Verbatim 的支持团队，請登入 - www.verbatim.com/support。

(KO) 사용 설명서 다운로드, 자주 묻는 질문 확인 또는 버바팀 지원팀에 직접 문의하시려면 www.verbatim.com/support 로 접속하십시오.

(JP) ユーザーマニュアルのダウンロード、よくあるご質問、サポート情報については、www.verbatim.com/supportをご参照ください。



www.verbatim.com

- EUROPE/MIDDLE EAST/AFRICA/INDIA: Verbatim GmbH, Düsseldorf StraÙe 13, 65760 Eschborn, Germany
- AMERICAS: Verbatim Americas LLC. Charlotte, NC 28262, USA
- AUSTRALIA/ NEW ZEALAND: Verbatim Australia Pty Ltd 36-40 Pacific Drive Keysborough, Victoria, 3173 Australia
- ASIA: Verbatim Hong Kong Ltd, Unit 701, 7/F, Tower 2, South Seas Centre, 75 Mody Road, Kowloon, Hong Kong
- Japan: Verbatim Japan LTD., 2-15-4 Kandatsukasamachi, Chiyoda-ku, Tokyo 101-0048, Japan



⚠ 浸水后禁止使用



MIX
Packaging from
responsible sources
FSC® C193091



MIXTE
Emballage | Pour une gestion
forestière responsable
FSC® C193091